

TV EASY TUNE INSTRUCTION FOR USE WITH WIND UP ROOF ANTENNAS



The TV EASY TUNE (for rest of this instruction known as ET) is found on the front page of our website & when clicking on the product it will open more information, plus allow you to view a more detailed YouTube video of this instruction.

This is a supplementary instruction so when using this instruction please read instructions provided with ET product to get the best understanding of the ET.

The ET has been extensively installed in the field & tested over the past few months and provides approximately double the signal boost to that included in your WIND UP ROOF ANTENNA.

It also allows you to find the best signal direction & boost using control knob to get required signal level on your TV set. Additional variable gain is sloped from 5 to 19 dB.

The ET is supplied as a 10.5 to 28 DC volt product but below will show 3 ways to power the unit. Then we will show you how to install for a single TV and multiple TV sets in your Caravan or RV. It is important that you understand and if you are not sure that you can do this yourself then employ an Auto Election or a qualified Caravan repair workshop. Also, feel welcome to contact us through our web page or ring Bob Ayles on Mobile 0412 125 983 for verbal clarification.



Photo 1 is the cable supplied with ET with a Cigarette lighter Male wired to cable (use auto electrician if necessary).



Photo 2 is a Double adaptor if you want to power with a Cigarette Male. We have shown this into a Female double adaptor so you can power TV and ET.



Photo 3

Photo 4

Photos 3 and 4 shows a 240/low DC volt power pack & these are supplied separately by HappyWanderer or our dealers - \$25RRP



Photo 5 shows unit hard wired 12 volt after removing wall plate. If not capable this should be done by a qualified installer or auto electrician. If you hard wire for single TV then file a small nick in wall plate so you do not squash cable when putting wall plate back on.